

Yaesu FTM-400 DR

Extended Band Mod 136-174 / 400-480MHz

New frequencies after the modification:

136-174 mhz RX/TX

400-480 mhz RX/TX

1. Open the upper shell (speaker)
2. Lithium battery located on the left side
3. Identify positive symbol on lithium battery
4. Remove resistance as shown in photos
5. Perform a CPU reset (page 61)



*NOTE: Mod will not work on US version